

A

B


C

D

E

F

## TEF4600

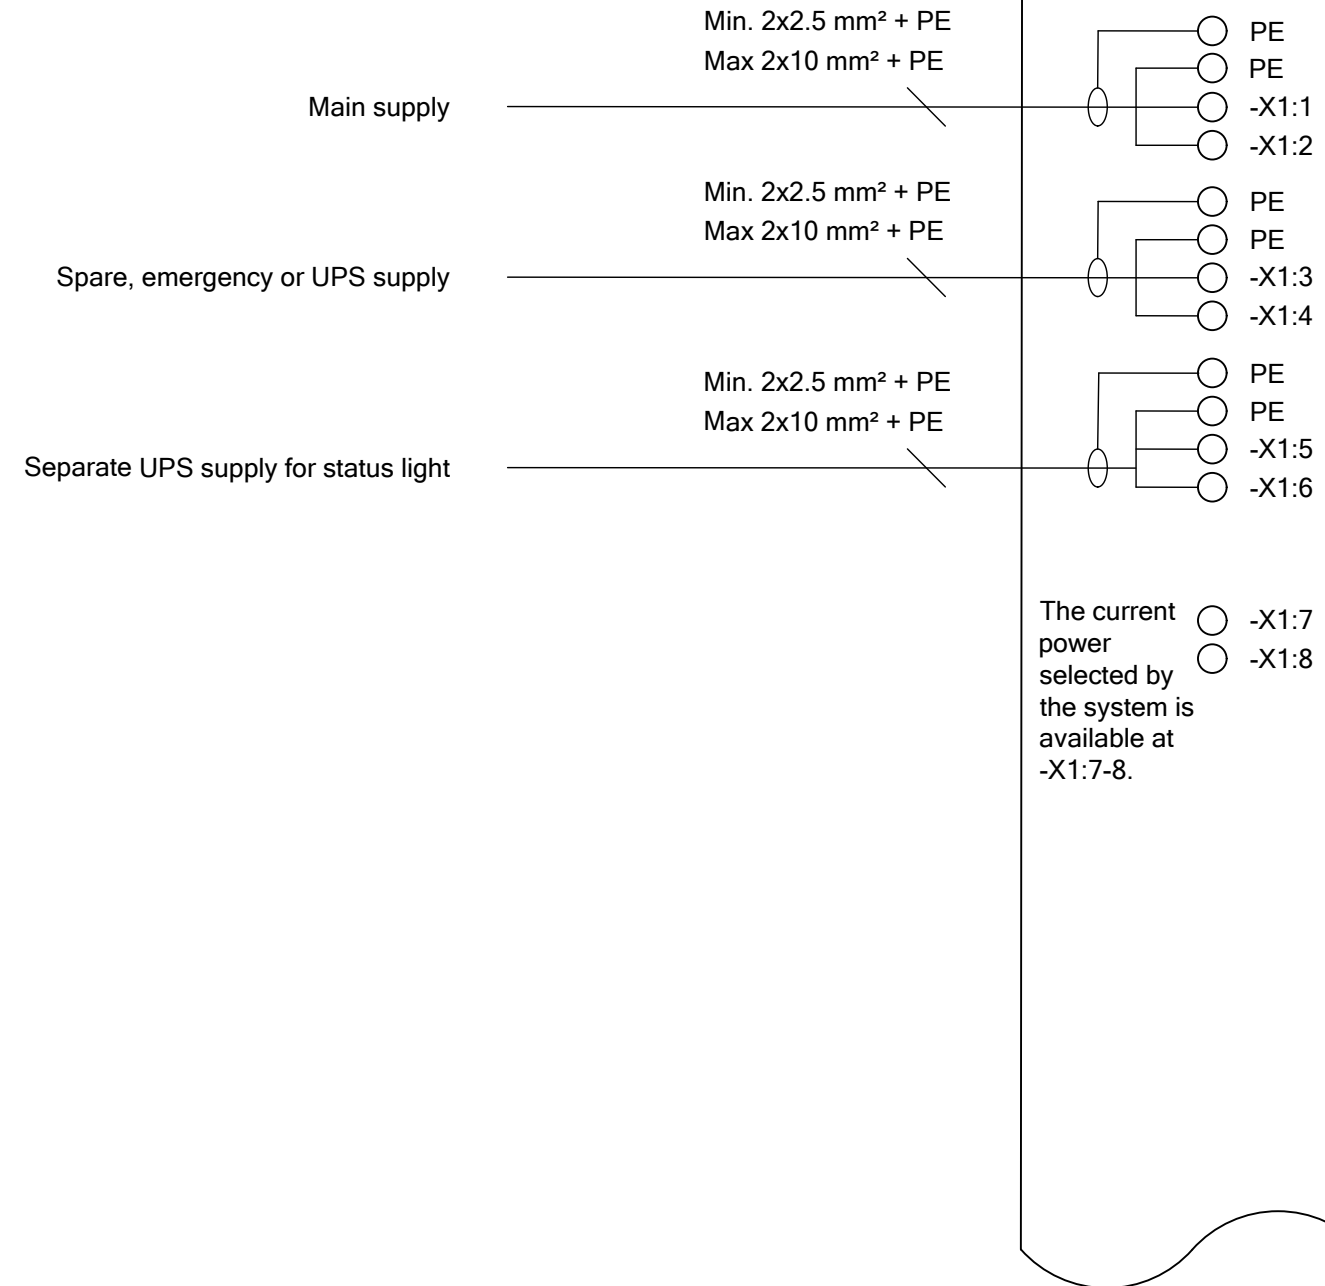

Option: If status light should be supplied from main/spare selected power, latch -X1:5 to -X1:7 and -X1:6 to -X1:8, and do not connect external power to -X1:5-6.

**! WARNING!**  
 Do not connect/disconnect wires when energized.

					Date 23.02.17	Strandsvingen 6, P.O.Box 8033 N-4068 STAVANGER, NORWAY www.tranberg.com info@tranberg.com	<b>TRANBERG</b>	TEF 4600 Integrated HCS Helideck lighting system -X1: Power inputs	Dwg. No.: 460A112031	
					Design BKF					
						© TRANBERG A.S 2017				
Edition	Revision	Date	Signature	Norm					File No.: 460A112031	Sheet no. 1 Total 1