


## TEF4600

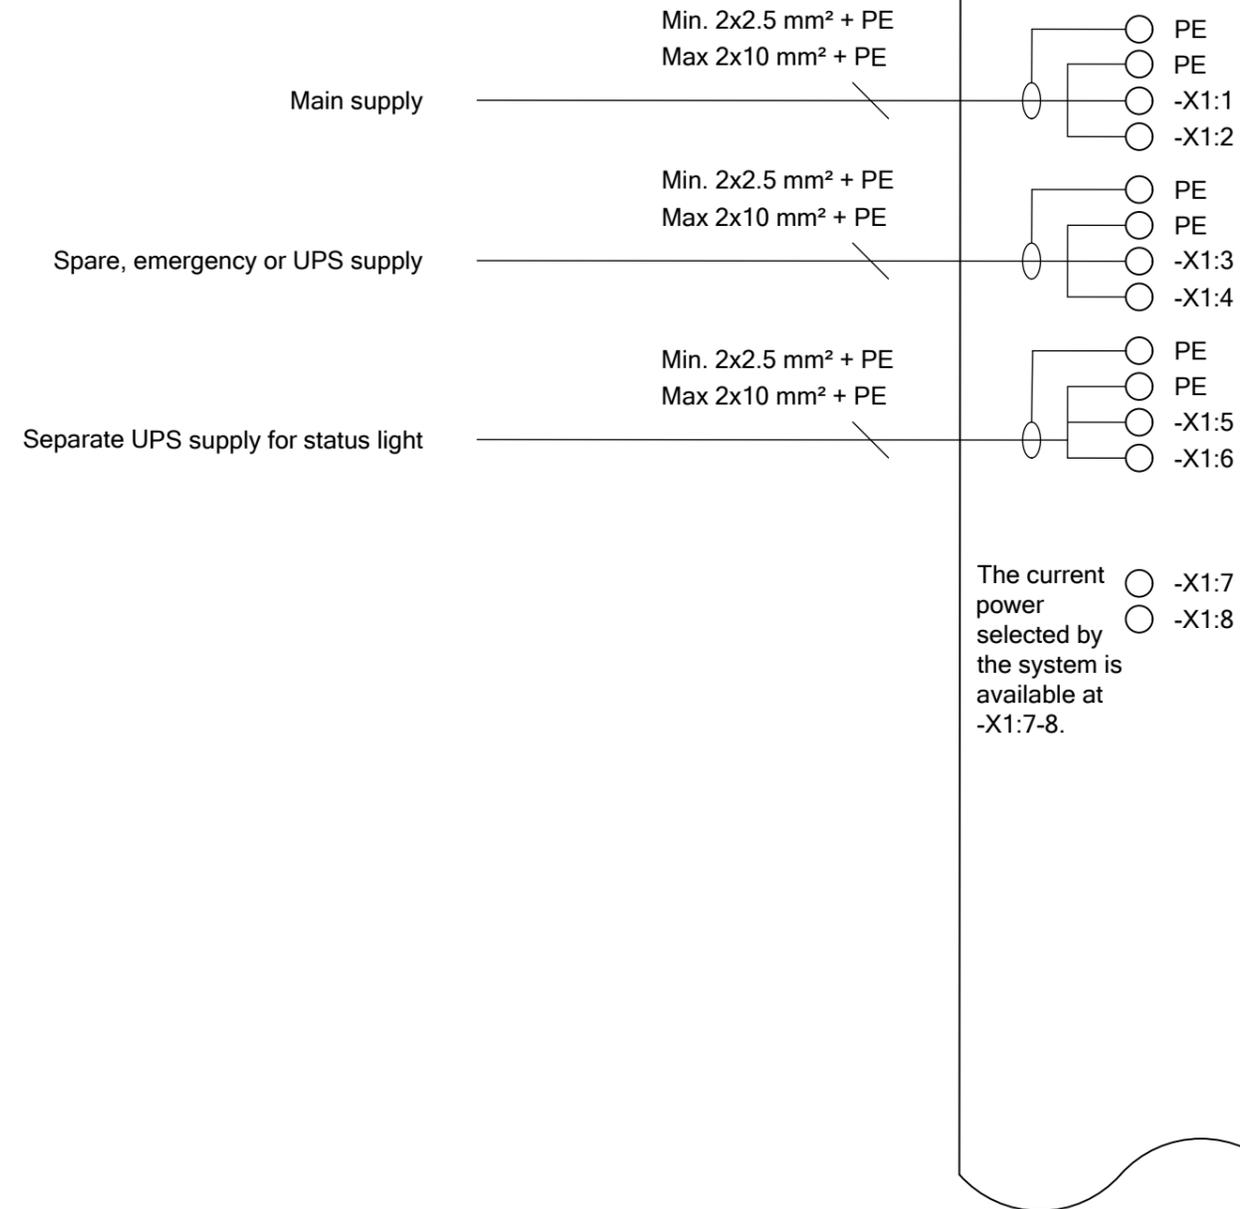

Option: If status light should be supplied from main/spare selected power, latch -X1:5 to -X1:7 and -X1:6 to -X1:8, and do not connect external power to -X1:5-6.



**WARNING!**  
Do not connect/disconnect wires when energized.

					Date 12.06.24	Design FO	Approved	Strandsvingen 6, P.O.Box 8033 N-4068 STAVANGER, NORWAY www.tranberg.com info@tranberg.com	<b>TRANBERG</b>	TEF 4600 Integrated HCS Helideck lighting system -X1: Power inputs	Dwg. No.: 460A112031	File No.: 460A112031	Sheet no. 1 Total 1
Edition	Revision	Date	Signature	Norm	© TRANBERG A.S 2017								