

Installlation Manual

ENCLOSURE HEATER TEF 9207

Zone 1, Zone 2 & Safe Area





Document properties (TUM7139)

Revision	Comment	Revision date	Approved
-	First issue	-	AKA
А	Removed EAC-certification	06.04.2022	CKR
В	Updated with new certificate and UKCA	01.04.2023	CKR



R. STAHL TRANBERG AS Main office | Strandsvingen 6 | N-4032 Stavanger, Norway | T +47 51 57 89 00 | E info.no-st@r-stahl.com | stahl-tranberg.com Oslo office | Luhrtoppen 2 | N-1470 Lørenskog, Norway | T +47 24 08 44 10 | E info.no-os@r-stahl.com | stahl-tranberg.com

Installation and operating manual

Contents

Document properties (TUM7139)	1
Warnings and risk levels	3
General information	3
Marking and intended use	4
Special conditions for safe use	5
Technical data	5
Product description	6
Transport and storage	6
Mounting and installation	7
Mounting	7
Electrical connections	8
Commissioning	9
Operation	9
Maintenance and cleaning	9
Disposal	10
Compliance/Conformity	10
R. Stahl Tranberg declaration of Conformity:	11



Warnings and risk levels

DANGER

Non-compliance with the instruction results in risk of severe or fatal injuries to persons

WARNING

Non-compliance with the instruction may result in risk of severe or fatal injuries to persons

CAUTION

Non-compliance with the instruction may result in risk of injuries or damage to equipment



Non-compliance with the instruction may result in reduced lifetime of equipment, malfunctions etc.

General information

Before installation, make sure to read and understand this installation and operating manual.

Observe national assembly and installation regulations.

Always contact the manufacturer if anything is unclear, or if you notice any faults on the product or in this document.

This installation and operating manual shall be available to anyone operating, installing, inspecting, modifying or repairing the equipment.

For further information, see the referenced certificates.



Marking and intended use

DANGER
Not for use in Zone 0 or Class I division 1.
CAUTION
The enclosure heater shall not be exposed to direct sunlight, dust, water or similar. The enclosure heater should be protected from contamination and shall not be cleaned with running water.

- CE
- ATEX / IECEx/ UKEx: 😥 II 2G Ex 60079-30-1 IIC T3 Gb

€x I 2G Ex 60079-30-1 eb mb IIC T3 Gb

For use in hazardous areas Zone 1 or Zone 2

For use in onshore/offshore areas protected from exposure.



Special conditions for safe use

DANGER

Special conditions for safe use are critical conditions to maintain the explosion protection of the equipment. These shall be adhered to in all cases and under all circumstances.

- When the heater is not installed inside a certified hazardous area enclosure (for example Ex p, Ex e, Ex d etc.) the flying lead cable shall be protected from mechanical damage.
- The heaters with thermostat shall be connected to a circuit breaker with rated current max. 16A and a breaking capacity of min. 1500A.
- The supply circuit shall include an electrical protection device in conformity with EN 60079-30-1 (For version 2015/2017 clause 4.3).
- Follow the instructions given in this IOM

Technical data

Property	Value	Value	
Explosion protection * Note:"mb" only with thermostat	🖾 II 2G Ex 60079-30-1 IIC T3 Gb	Ex II 2G Ex 60079-30-1 eb mb IIC T3 Gb *	
Input voltage and frequency	220-240V AC (model dependant)	50/60Hz	
Input current	Model specific	Start-up: >6x nominal current	
Rated power	100-1000W (model dependent)		
Ingress protection	IP66		
Ambient temperature	-50°C+50°C (+80°C if thermostat is used or power is disconnected)		
For use in zone	Zone 1 or 2		
Communication	N/A		
Weight	Model specific, see datasheet		
Size	Model specific, see datasheet	Mounting: 4x M6 Screw	
Terminals	Screw terminals, 6(10)mm ²		
Entries/Cable glands	If installed, M25 (CMP A2F 25)	Ø11.1-20.0mm	
Housing material	Stainless steel		
Other materials	Polymer, Silicone, Brass		



Product description

The TEF 9207 Enclosure heater consists of a self-limiting heat tracing cable arranged in stainless steel housing. Different versions come with a flying lead silicone cable, integrated junction box or integrated junction box with thermostat. The product series is designed to maintain a minimum temperature inside an enclosure (distribution board, storage cabinet or similar). The self-limiting characteristic of the heating element prevents severe overheating, but a thermostat is always recommended, especially for sensitive equipment.

Transport and storage

- Transport and store the equipment only in the original packaging
- Store the equipment in a dry and vibration free place
- Do not drop!
- Protect the flying lead cable during transport and storage



Mounting and installation

DANGER


Incorrect mounting and installation may lead to ignition of an explosive atmosphere, risk of falling objects, risk for electric shock and risk for equipment malfunction. In turn, this can lead to severe damage and/or injuries. The integrated silicone cable is susceptible to mechanical damage and shall be protected in all phases (transport, storage, installation and operation). Observe "Special conditions for safe use".

Mounting

The TEF 9207 enclosure heater shall be mounted on a flat and sturdy surface. Mounting is done with 4x M6 screws. The mounting shall be done to ensure that any foreseen load, vibrations, shock or similar do not impose a risk of mechanical failure or loosening of screws.

For detailed mounting dimensions, see the respective datasheet for each model and type.

Mounting dimensions		
Body size	Е	F
А	190	160
В	440	200
С	590	240
D	760	320
Sandwich heaters		
D	760	397

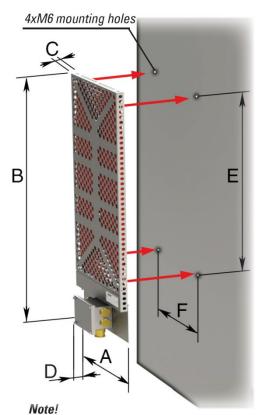

Never install the heater with junction box facing upwards.



Electrical connections

NOTICE

See "Special conditions for safe use"

Electrical connections shall only be performed by trained personnel according to the relevant regulations. Special care shall be taken to ensure proper connection of the wires. The insulation shall reach all the way to the connection point, and no strands shall be loose. Ferrules are recommended.


The supply circuit shall be protected according to EN/IEC 60079-30-1. The flying lead cable shall be terminated in a manner suitable for the hazardous area classification (e.g. in an Ex e junction box).

Power terminals are 6mm², and the PE terminal is 10mm² max. Min. 2,5mm² cables are recommended.


Enclosure heaters with a junction box are delivered with 1 pc. cable gland for cables Ø11.1-20mm.



Bonding to earth.

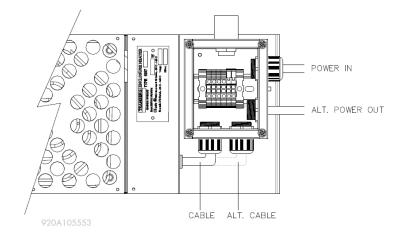



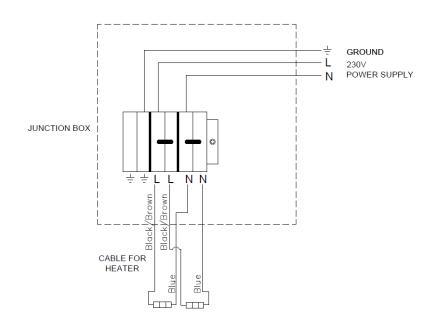

Commissioning

During commissioning, an insulation resistance test of max 2550V DC is recommended. For critical applications, a thermostat function test is recommended. Verification of temperatures inside enclosures is strongly recommended.

Operation

To save energy, ensure a long lifetime of the enclosure heaters, and to prevent over-heating of enclosures and components, the heater should be switched off when heating is not needed. This could be done with a thermostat, manually or based on seasonal variations.

Regular visual inspections, earth-fault- or insulation resistance measurements shall be performed. Inspections shall be carried out according to IEC/EN 60079-17 or other relevant standards.

Maintenance and cleaning

As stated above, regular inspections and maintenance shall be performed according to IEC/EN 60079-17 or equivalent.

Clean only with a damp cloth, and mild detergents. Do not use running water. Avoid chemicals with high or low pH, abrasives, high pressure washer, strong detergents, solvents, petroleum- or alcohol based cleaning agents and similar. Avoid any corrosive media.



Disposal

CAUTION

This equipment or part of this equipment is considered EE-Waste, and shall be handled accordingly

- Observe national and local regulations and statutory regulations regarding disposal
- Separate materials when sending it for recycling
- Ensure environmentally friendly disposal of all components
- No component or packaging shall end up in the ocean during any stage of the product's lifetime

Compliance/Conformity

- ATEX: CML 22 ATEX 3623X
- UKEX: CML 22 UKEX 3624X
- IECEX: IECEX CML 22.0096X

The certificates are issued in based on the following standards:

ATEX / UKEX:	IECEx:
EN IEC 60079-0:2018	IEC 60079-0:2017 Ed. 7.0
EN IEC 60079-7:2015/A1:2018	IEC 60079-7:2017 Ed. 5.1
EN 60079-18:2015/A1:2017	IEC 60079-18:2017 Ed. 4.1
EN 60079-30-1:2017	IEC/IEEE 60079-30-1:2015 Ed. 1.0



R. Stahl Tranberg declaration of Conformity:

EU DoC: Document no. TDC3359

EU-Konfor Déclaratio R. Stahl Tra	ration of Conformity rmitätserklärung n de Conformité UE anberg AS • Strandsvingen 6 sole responsibility, erklärt in alleiniger	• 4032 Stavanger • Norway	STAHL TRANBERG
that the produ dass das Produ que le produit:	ict:	TEF 920x Enclosure heaters	·
Type(s), Typ(e	en), type(s):	920x (9202, 9207 and 9208)	
mit den Anford	ty with the requirements of the follow erungen der folgenden Richtlinien und N ux exigences des directives et des norm	ormen übereinstimmt.	
Directive(s) / /	Richtlinie(n) / Directive(s)	Standard(s) / Norm(en) / Norme(s)	
2014/34/EU 2014/34/EU 2014/34/UE (OJ L 96, 29.3.	ATEX Directive ATEX-Richtlinie Directive ATEX 2014, p. 309–356)	EN IEC 60079-0:2018 EN IEC 60079-7:2015/A1:2018 EN 60079-18:2015/A1:2017 EN 60079-30-1:2017	
Marking, kenn	zeichnung, marquage:	II 2 G Ex 60079-30-1 IIC T* Gb (Type : 9202, 9207 and 9208) II 2 G Ex 60079-30-1 eb IIC T* Gb (Type : 9207 and 9208) II 2 G Ex 60079-30-1 eb mb IIC T* Gb (Type : 9207 and 9208) * T4 or T3 depending on model	C€ ₀₄₇₀
EG/EU-Baumu	xamination Certificate: sterprüfbescheinigung: xamen CE/UE de type:	CML 22 ATEX 3623X	
2014/35/EU: 2014/35/EU 2014/35/UE:	Low Voltage Directive Niederspannungsrichtlinie Directive Basse Tension	N/A	
2014/30/EU 2014/30/EU 2014/30/UE (OJ L 96, 29.3.	EMC Directive EMV-Richtlinie Directive CEM 2014, p. 79–106)	Not applicable according to article 2, par	agraph 2.
2011/65/EU 2011/65/EU 2011/65/UE (OJ L 174, 01.0	RoHS Directive <i>RoHS-Richtlinie</i> <i>Directive RoHS</i> 07.2011, p. 88–110)	EN 63000:2018	
retained at the Die technische unter folgender La documentat	documentation for this equipment is e following address Dokumentation für dieses Gerät wird r Adresse aufbewahrt tion technique de cet équipement est adresse suivante	R. Stahl Tranberg AS, Strandsvingen 6, 403	2 Stavanger, Norway.
Stavanger, 28. Place and date		/c Appfjell	op <u>A. Apfiell</u> , Tor Arne

Appfjell, Tor Arne Certification / Ex resp.

Document No.: TDC5848 - Rev. E - Rev. Date 2022-11-28 - Original date: 03.05.2017

Ort und Datum

Lieu et date





R. STAHL TRANBERG AS Main office | Strandsvingen 6 | N-4032 Stavanger, Norway | T +47 51 57 89 00 | E info.no-st@r-stahl.com | stahl-tranberg.com Oslo office | Luhrtoppen 2 | N-1470 Lørenskog, Norway | T +47 24 08 44 10 | E info.no-os@r-stahl.com | stahl-tranberg.com

СТАЦІ

UK DoC: Document no. TDC7382

UK Declaration of Conformity	STAF	1L
	TRANBI	ERG
R. Stahl Tranberg AS • Strandsvingen 6 declares in its sole responsibility,	• 4032 Stavanger • Norway	
that the product:	TEF 920x Enclosure heaters	
Type(s), Typ(en), type(s):	920x(9202, 9207 and 9208)	
is in conformity with the requirements of the following	ng regulations and standards.	
Regulations:	Standard(s)	
Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016, SI 2016 No. 1107 as amended by the Product Safety and Metrology etc. (Amendment etc.) (EU Exit) Regulations 2019, SI 2019 No. 696	EN IEC 60079-0:2018 EN IEC 60079-7:2015/A1:2018 EN 60079-18:2015/A1:2017 EN 60079-30-1:2017	
Marking, kennzeichnung, marquage:	II 2 G Ex 60079-30-1 IIC T* Gb (Type : 9202, 9207 and 9208) II 2 G Ex 60079-30-1 eb IIC T* Gb (Type : 9207 and 9208) II 2 G Ex 60079-30-1 eb mb IIC T* Gb (Type : 9207 and 9208) * T4 or T3 depending on model	IK A 8501
UK Type Examination Certificate:	CML 22 UKEX 3624X	
Electrical Equipment Regulations (Safety) 2016, S.I. 2016 No. 1101 as amended by the Product Safety and Metrology etc. (Amendment etc.) (EU Exit) Regulations 2019, SI 2019 No. 696	N/A	
Electromagnetic Compatibility Regulations 2016, S.I. 2016 No. 1091 as amended by the Product Safety and Metrology etc. (Amendment etc.) (EU Exit) Regulations 2019, SI 2019 No. 696	Not applicable according to article 2, paragraph 2.	
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, S.I. 2012 No. 3022 with amendments	EN 63000:2018	
The technical documentation for this equipment is retained at the following address	R. Stahl Tranberg AS, Strandsvingen 6, 4032 Stavanger, Norw	vay.

Stavanger, 28.11.2022 Place and date

loe A. Appfell

Appfjell, Tor Arne Certification / Ex resp.

Document No.: TDC7382 - Rev. - - Rev. Date 2022-11-28 - Original date: 2022-11-28



R. STAHL TRANBERG AS Main office | Strandsvingen 6 | N-4032 Stavanger, Norway | T +47 51 57 89 00 | E info.no-st@r-stahl.com | stahl-tranberg.com Oslo office | Luhrtoppen 2 | N-1470 Lørenskog, Norway | T +47 24 08 44 10 | E info.no-os@r-stahl.com | stahl-tranberg.com Page 1 of 1