

## IMPORTANT!

Read this instruction carefully before installing the product



TRANBERG

STAHL

THE STRONGEST LINK.

# TRANBERG® STOPPING PLUG

TEF 793-652 Ex d/ Ex e Stopping Plug

TEF 794-650 Ex e Stopping Plug

Zone 1, Zone 2 & Safe Area

## USER MANUAL

### R. STAHL TRANBERG AS

Main office | Strandsvingen 6 | N-4032 Stavanger, Norway | T +47 51 57 89 00 | E info.no-st@r-stahl.com | stahl-tranberg.com  
Oslo office | Luhrtoppen 2 | N-1470 Lørenskog, Norway | T +47 24 08 44 10 | E info.no-os@r-stahl.com | stahl-tranberg.com

# USER MANUAL

TEF 793-652 Ex d/ Ex e Stopping Plug

TEF 794-650 Ex e Stopping Plug

Zone 1, Zone 2 & Safe Area

## General Information

### Manufacturer

R. STAHL TRANBERG AS

**Web** [stahl-tranberg.com](http://stahl-tranberg.com)

### Main office:

Strandsvingen 6

N-4032 Stavanger

Norway

**T** +47 51 57 89 00

**E** [info.no@r-stahl.com](mailto:info.no@r-stahl.com)

### Oslo office:

Luhrtoppen 2

N-1470 Lørenskog

Norway

**T** +47 24 08 44 10

**E** [info.no-os@r-stahl.com](mailto:info.no-os@r-stahl.com)

## About these operating instructions:

- Read these operating instructions, especially the safety notes, carefully before use.
- Observe all other applicable documents (See also further documents section).
- Keep the operating instructions throughout the service life of the device.
- Make the operating instructions accessible to operating and maintenance personnell at all times.
- Pass the operating instructions on to each subsequent owner or user of the device.

Document no: TUM4303

R. Stahl Tranberg Revision: F

## Further documents for this product:

- Datasheet 793-652, TPS4522
- Datasheet 794-650, TPS1099 & TPS4304
- ATEX Certificate NEMKO 13ATEX1553X
- IECEx Certificate, IECEx NEM 13.0025X
- Declaration of Conformity (DoC), TDC4875

# USER MANUAL

TEF 793-652 Ex d/ Ex e Stopping Plug

TEF 794-650 Ex e Stopping Plug

Zone 1, Zone 2 & Safe Area

Technical Data	
Ex protection (threads 9mm and NPT)	Ⓔ II 2 G Ex eb IIC
Ex protection (threads 15mm)	Ⓔ II 2 G Ex db IIC / Ⓔ II 2 G Ex eb IIC
Ingress Protection 794-650	IP 66/67
Ingress Protection 793-652	IP 54
Ambient temperature	-60°C to +135°C
Thread length 794-650	9mm and 15mm (from M40 upwards only 15mm)
Thread length 793-652 (NPT)	According to NPT thread table
Certificates	IECEX NEM 13.0025X & NEMKO 13ATEX 1553X
Material housing	Brass or stainless steel (AISI 316/ EN 1.14404)
Material sealing 794-650	Silicone o-ring or PTFE gasket
Material sealing 793-652 (NPT)	None
Depth of threads in explosion proof enclosure w/ volume less than 100 dm <sup>3</sup>	Minimum 5mm
Depth of threads in explosion proof enclosure w/ volume more than 100 dm <sup>3</sup>	Minimum 8mm

## Applications

- Outdoor or indoor.
- To close unused entries in enclosures.
- Suitable for use in hazardous areas, zone 1, zone 2 and safe area.

## Tools required

- Wrench according to size of cable gland

## Content in box

- The product is fully assembled, and ready for installation.

## Safety precautions

Note that changes made to the product and / or installation of components which do not conform to the approval, may be a safety violation. The manufacturer will in no circumstance be held responsible for such activity.

For your health and safety, always use safety gear suited for the task. Be certain to follow codes, regulations and/or specific procedures that are related to the installation.

To ensure IP66/67, make sure that the o-ring seal is in good contact with the enclosure wall. There shall be no gap between the cable gland and the enclosure wall when an o-ring is used.

To ensure this, we recommend a chamfer of the threads in any threaded enclosure of 1-1,5mmx45°.

If the chamfer is too small, the insertion of the gland may be difficult or impossible, and if the chamfer is too large, the o-ring seal may not seal properly with the enclosure wall.

It is the installer's responsibility to verify that the seal after installation is sufficient for both clearance holes and threaded holes.

## Special conditions for use

- Blanking elements shall not be used with adaptors

## Maintenance instructions

- The product should be inspected according to company routines and/or relevant to national regulations for your country.

## Approvals

- ATEX Certificate NEMKO 13ATEX1553X
- IECEX Certificate, IECEX NEM 13.0025X

### Compliance standards:

Directive 2014/34/EU

IEC 60079-0-\*

IEC 60079-7-\*

IEC 60079-1-\*

\* Refer to EU Declaration of conformity for more details.

# USER MANUAL

TEF 793-652 Ex d/ Ex e Stopping Plug

TEF 794-650 Ex e Stopping Plug

Zone 1, Zone 2 & Safe Area

## Conditions for holes

		Threaded holes	Clearance holes
1	Tolerance class	Mxx (6H) is required for Ex d and recommended for Ex e. Tolerance class for Ex e is max. 6G/6H. Ref. ISO 965-1 and ISO 965-3	Nominal thread size -0,0mm/ +0,2mm
2	Enclosure material limitations	Brass plugs should not be installed in zinc or aluminum enclosures outdoor or in humid environments.	Brass plugs should not be installed in zinc or aluminum enclosures outdoor or in humid environments.
3	Enclosure interface sealing method	o-ring	o-ring
4	Maximum surface roughness of the enclosure face for sealing	Ra 6,4µm, better than 3,2µm is recommended.	Ra 6,4µm, better than 3,2µm is recommended.
5	Thickness range for the enclosure wall	Less than the thread length of the plug.	Thread length minus 6mm (Thread L 9mm -6mm = 3mm & Thread L 15mm-6mm= 9mm)
6	Perpendicularity	+/-1° or 0,2mm at the outer edge of the gland, whichever is SMALLER.	+/-1° or 0,2mm at the outer edge of the gland, whichever is SMALLER.
7	Permitted use and location of any earth tags	Earth tags should be installed on the inside of the enclosure. Thickness of tag and lock nut to be included in the thickness consideration in point 5.	Earth tags should be installed on the inside of the enclosure. Thickness of tag and lock nut to be included in the thickness consideration in point 5.
8	For chamfered holes	The outermost edge must not have a greater diameter than the center of the O-ring.	The outermost edge must not have a greater diameter than the center of the O-ring.
9	Lock nuts	Use only TRANBERG® locking nuts, or other types recommended by the manufacturer	Use only TRANBERG® locking nuts, or other types recommended by the manufacturer

## Installation Instructions

**Before installing the component, ensure that:**

- The stopping plug is installed according to the instructions required by the standard and will not invalidate the specific characteristics of the Ex protection of the electrical equipment on which they are mounted.
- The stopping is not damaged.
- The o-ring/gasket is not damaged and that the gasket bearing areas are flat.

**Installation:**

1. Screw the stopping plug (1) into the enclosure and tighten it with a wrench. For tightening torque see the table on the next page in this user manual.
2. When used in a sheet metal enclosure, use a lock nut inside the enclosure to fasten the stopping plug.
3. Plugs with NPT threads do not have any sealing arrangement. In contrast to straight Metric threads, a taper thread will pull tight and therefore make a fluid tight seal.
4. For installation in "d" explosion proof enclosures, make sure that sufficient number of threads is engaged. Min. 5 threads.
5. Use a wrench to fully tighten the plug (1).
6. For type of protection Ex d stopping plug shall not be used in an adapter.


# USER MANUAL

TEF 793-652 Ex d/ Ex e Stopping Plug

TEF 794-650 Ex e Stopping Plug

Zone 1, Zone 2 & Safe Area

## Stopping plug w/ O-ring

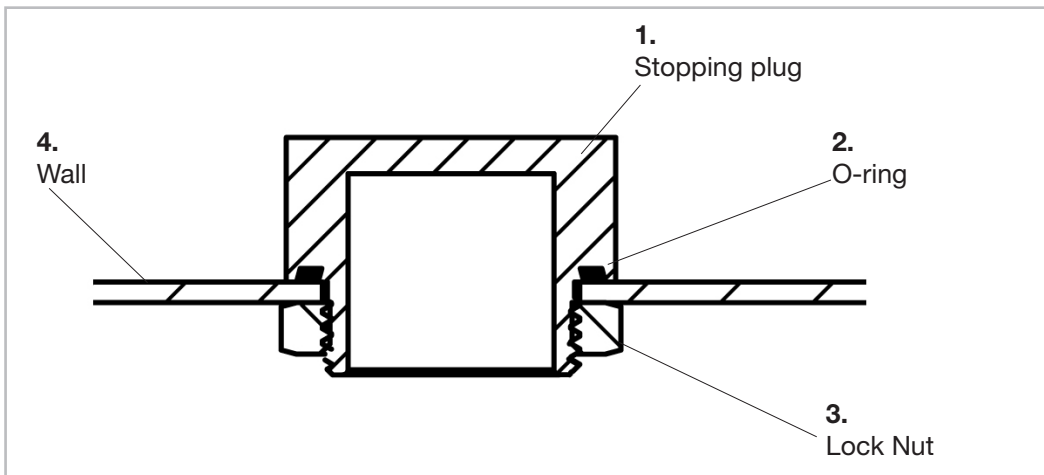



**R. STAHL TRANBERG AS**

Main office | Strandsvingen 6 | N-4032 Stavanger, Norway | **T** +47 51 57 89 00 | **E** info.no-st@r-stahl.com | stahl-tranberg.com  
Oslo office | Luhrtoppen 2 | N-1470 Lørenskog, Norway | **T** +47 24 08 44 10 | **E** info.no-os@r-stahl.com | stahl-tranberg.com